




**POLY PRODUCTS INC.**

**Contact us today:**  
(216) 391-7659  
info@poly-products.com

## RAIN CAP ASSEMBLY WITH LEGS

### Installation Tips

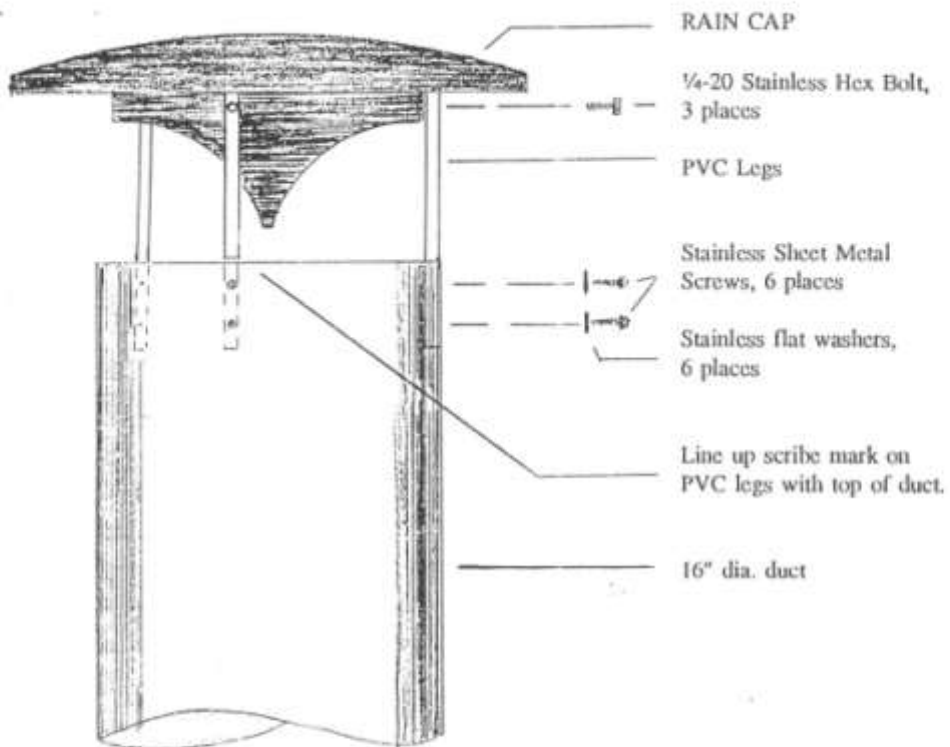

## INSTRUCTIONS

### Tools Required:

3/16" drill & Phillips screwdriver  
String, 17-3/8" long  
Marking pen or pencil  
2 small nails

*Using one of the PVC legs and two small nails, mark the location for two 3/16" holes (making sure the scribe mark on the PVC leg is lined up with the top of the duct). With pen or pencil, mark the position of the other two sets of holes by using the 17-3/8" measuring string around the outside of the duct. **DO NOT TIGHTEN** these screws at this time. Attach the Rain Cap as shown, then tighten the leg screws.*

\*\*\*\*\*